


EN

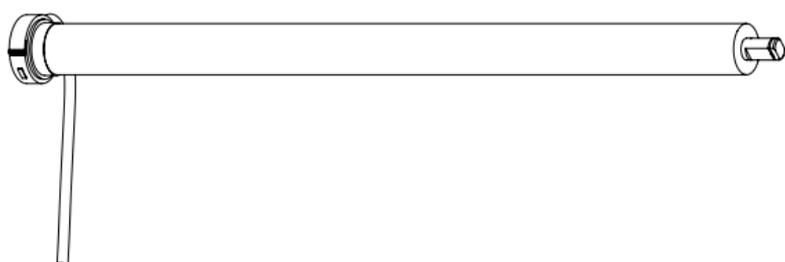

Link Tubular Motor 35mm

(for Atlantis[®] & BCS[®])

TABLE OF CONTENTS

1. Your Link Tubular Motor	
- Introduction	3
- Accessories	4
- Features & Benefits	4
- Supported protocol	4
- Declaration Of Conformity	5
2. Product Info	
- Product Info	6
- Safety Instructions	6
- Technical specification	7
3. Instructions	
- EasyTouch control buttons	8
- Functionality buttons	9
4. Get started	
- Motor button function	10
- Pairing Motor with Controller	11
5. Settings	
- Direction reverse	12
- Upper & lower limits settings	13
- Setting & cancelling favourites function	14
- Adjusting Upper & lower limits	15
- Adjusting Motor speed	15
- Remove remote controls	16
- Cancelling limits	16
6. Notice	
- Recycling	17
7. Support	
- FAQ	18

1. YOUR LINK TUBULAR MOTOR

INTRODUCTION

Thank you for choosing the Forest Link Tubular motor for the Atlantis® roller blind system and BCS® roman blind system.

This guide provides essential information on how to operate, maintain, and maximise the performance of your Forest Link Tubular 35mm motor.

In this manual, you'll find step-by-step instructions for usage and troubleshooting, as well as tips to ensure safe and efficient operation.

GENERAL

Please read this manual and the safety instructions carefully before using this Forest product.

Follow the instructions in this manual and keep it throughout the entire lifespan of the product.

This manual describes the setup and operation of the Link Tubular 35 mm motor.

Any use beyond the application scope defined by Forest is not permitted. Ignoring the instructions in this manual voids any liability and warranty from Forest Group.

INCLUDED IN THE BOX

- 1x Link Tubular Motor (3416700117)
- 1x Crown and drive adapter for BCS system
- 1x Manual

ACCESSORIES (NOT INCLUDED IN BOX)

- Forest EasyTouch Remote Control (520108X006)

FEATURES & BENEFITS

- Wireless RF operated
- Weight load:
 - BCS - 11kg
 - Atlantis 50mm - 12kg
 - Atlantis 60mm - 10kg
- 5 Year warranty on motor
- Adjustable speed 15/20/25 rpm

SUPPORTED PROTOCOL

This Link Tubular 35mm Motor is equipped with the Forest Link® protocol.



Forest Link RF
Protocol inside

DECLARATION OF CONFORMITY

FOREST®

DRAPERY HARDWARE

EU Declaration of Conformity

Hereby we, the undersigned:

Manufacturer: Forest Group Holdings E.G.
 Address (incl. Country): Engersberg 42, 1410 Wien (Austria), the Netherlands
 Telephone number: +31 20 578 527 998

Declare that this DoC is issued under our sole responsibility and that this product is:

Product description: Tube motor
 Type designation(s): 3450561 IT
 Trademark: Forest

Object of the declaration:



The object is in conformity with the relevant Union harmonization legislation:

01	RoHS Equipment (Directive) 2002/95/EC		
02	Article 3 (a)		Article 3 (a)
	EN 60335-1:2001 + A1:2005 + A11:2005		EN 60335-1:2001 + A1:2005 + A11:2005
	EN 60730-1:2012 + A1:2014		EN 60730-1:2012 + A1:2014
	EN 60335-2-2:2005 + A1:2009 + A12:2011 + A13:2011		EN 60335-2-2:2005 + A1:2009 + A12:2011 + A13:2011
	EN 60335-2-21		
03	Article 3 (a)		
	EN 60335-1:2001 + A1:2005 + A11:2005		EN 60335-1:2001 + A1:2005 + A11:2005
	EN 60730-1:2012 + A1:2014		EN 60730-1:2012 + A1:2014
	EN 60335-2-2:2005 + A1:2009 + A12:2011 + A13:2011		EN 60335-2-2:2005 + A1:2009 + A12:2011 + A13:2011
	EN 60335-2-21		

Signed for and on behalf of:


Place, Date: Vienna, 17-05-2015
 Name: A.G. ten Have
 Function: Head R&D

Signature:

EN

2. PRODUCT INFO

PRODUCT INFO

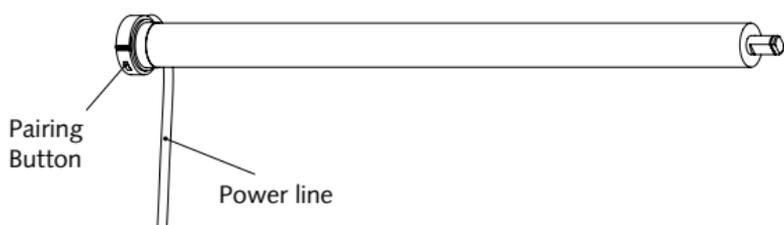

SAFETY INSTRUCTIONS

1. This product is for indoor use only, do not use outdoor or in humid environments.
2. Power supply: 230Vac
3. The motor will jog during setup, please do not proceed to the next step until jog is complete.
4. During setup, if no buttons are pressed for 10 seconds, the motor will exit the setting mode.
5. The motor can be paired with max 10 controllers.
6. Upper&Lower limits cannot be set at the same position, limits saved even power off.
7. The motor runs constantly for at 6 minutes max without any other operation.
8. Do not lift the motor by grabbing and pulling the power wire or the antenna.

TECHNICAL SPECIFICATION



- Voltage 220-240Vac
- Power max. 50Hz – 60W
- Current max. 0.3A
- Torque 5 Nm
- Speed 15 / 20 / 25
- Run time max. 6 minutes
- Length 60cm
- Diameter 35mm
- Frequency 433.92MHz
- RF range (max.) 30m
- Protection degree IP20
- Temperature 0 - 40°C

EN

3. INSTRUCTIONS

EASYTOUCH CONTROL BUTTONS

Press the cover on the back of the remote control and slide it upwards to reveal the battery compartment.

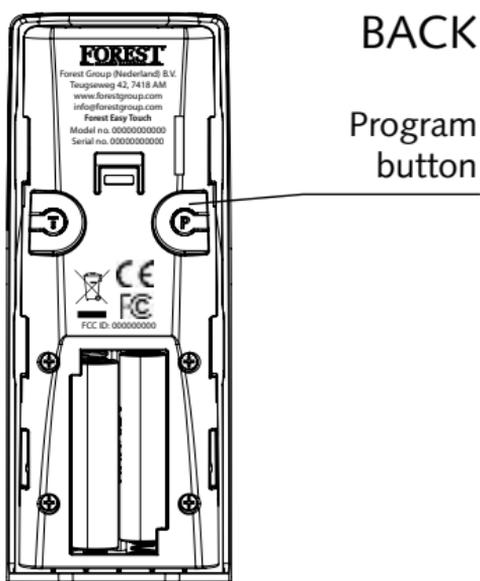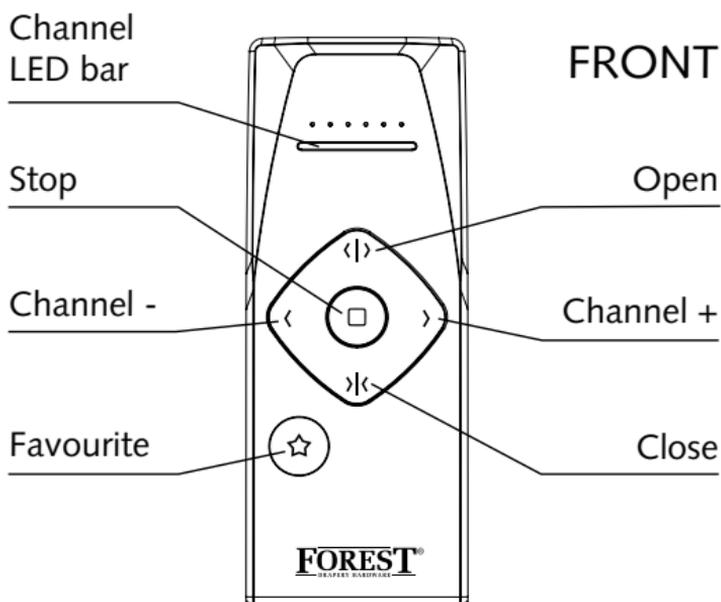

FUNCTIONALITY BUTTONS

Button		Description/ function
	Open	Opens the curtains or blinds
	Close	Closes the curtains or blinds
	Stop	Stops the movement
	Channel +	Switches to the next channel. The LED indicator moves to the right
	Channel -	Switches to the previous channel. The LED indicator moves to the left
	Favourite	Allows users to quickly access their preferred curtain positions with a single press
	Prg	The Program button, enables users to access programming functions

EN


4. GET STARTED

MOTOR BUTTON FUNCTIONS

Functions	Operation	Jogging time	Note
Control the UP/STOP/DOWN of the blind	Short press	/	Can only be used when limits are already set.
Adding/Removing Controller	Hold for 2s	Jog 1x	Press the P button on the remote control within 10 seconds.
Deactivate RF control	Hold for 6s	Jog 2x	Hold Pairing button for 6s, motor jogs twice to show the motor RF control is deactivated. To activate again: hold Pairing button for 2s.
Direction Reverse	Hold for 10s	Jog 3x	All other settings remain the same
Reset	Hold for 16s	Jog 4x	Delete all settings


PAIRING MOTOR WITH CONTROLLER

Option 1: Before motor is powered.

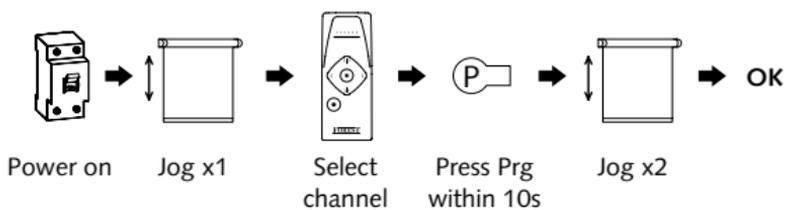


EN

Option 2: After motor is powered on for more than 10s

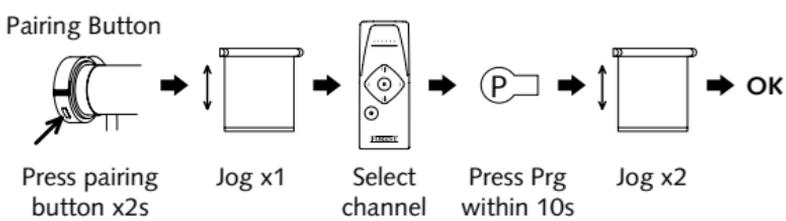

Option 3: Add controller B via pre-existing controller A

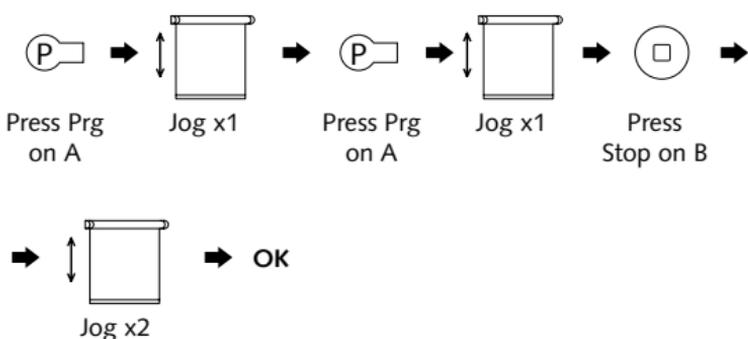


Note: Pairing can not be done under group channel or 0 channel.


5. SETTINGS

DIRECTION REVERSE


Correct

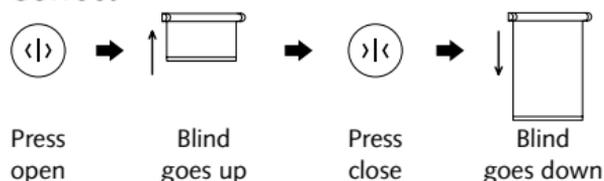

If the limits are not set, and direction goes opposite.


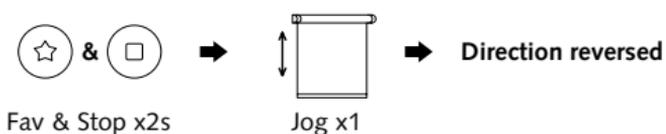


If limits are set and direction goes opposite.

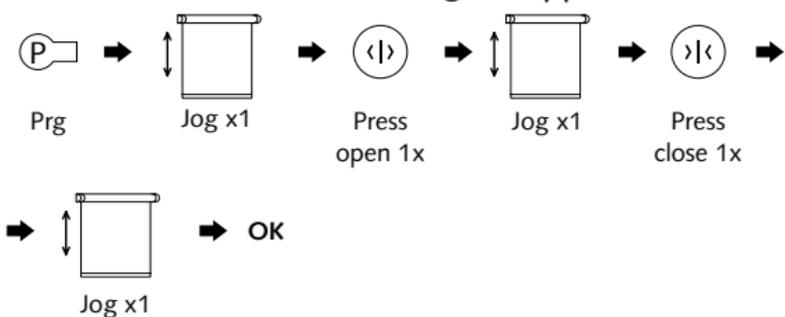

Note: Do reverse the direction when it goes opposite.

UPPER & LOWER LIMITS SETTINGS

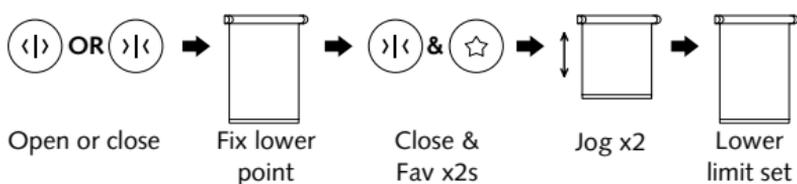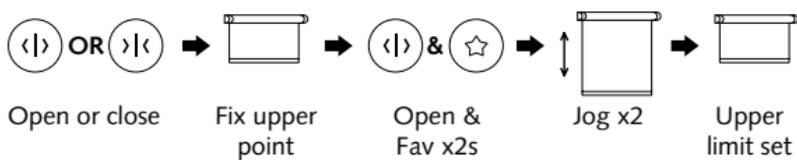


EN

Note: Upper&Lower limits cannot be set at the same point. Before limits set, the motor will run in one-touch mode when pressing Up or Down. Hold Up or Down for 2s, motor runs in constant-touch mode. Once limits are set, when pressing Up or Down, motor runs in constant-touch mode.


SETTING AND CANCELLING FAVOURITE FUNCTION

Setting

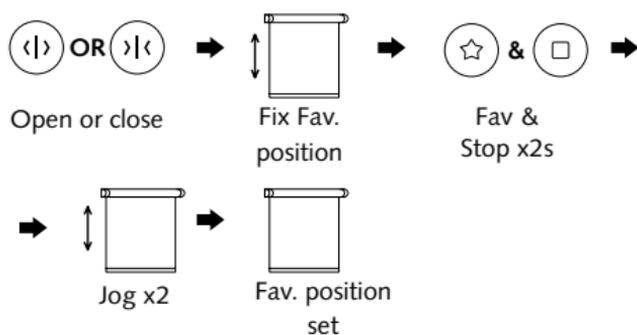


Important: The Favourites function can only be set if the end positions are configured.

Cancelling

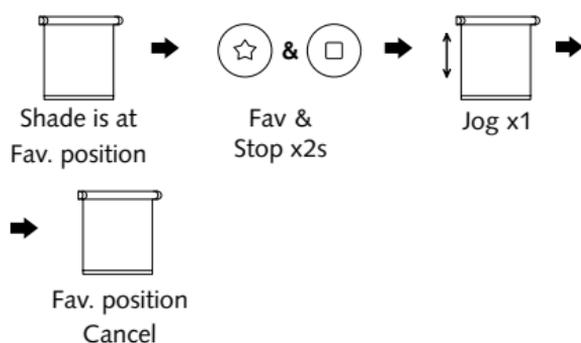


ADJUSTING UPPER & LOWER LIMITS

Adjust Upper limit

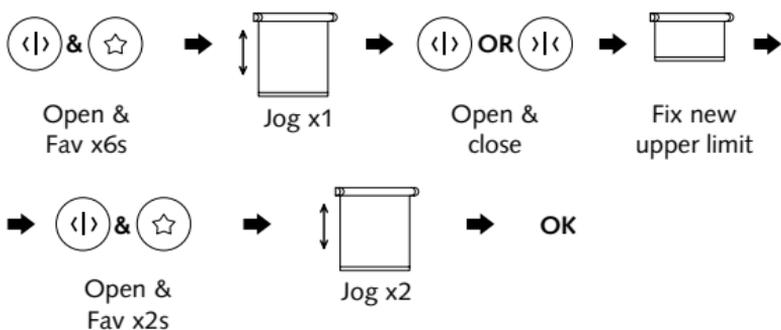

EN


Adjust Lower limit

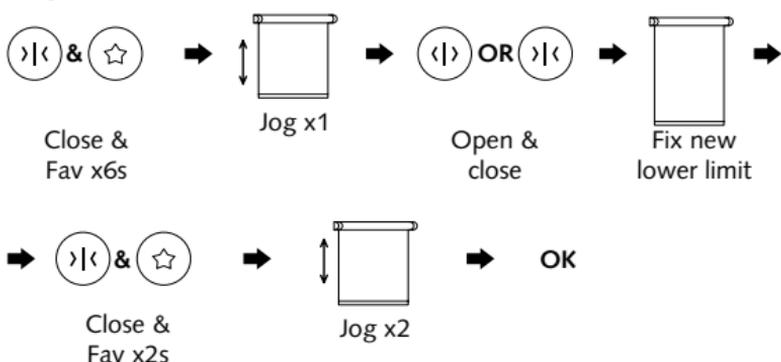


Note: The operation should be done within 4mins.

ADJUSTING MOTOR SPEED

speed increase:

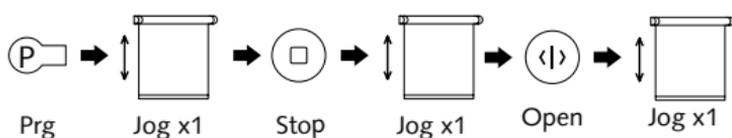

speed decrease:

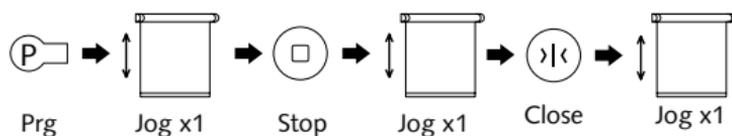


Note: If motor doesn't jog, the max/min speed has already been reached. There are 3 speeds adjustable.


REMOVE REMOTE CONTROLS

Remove a single controller

Pairing Button

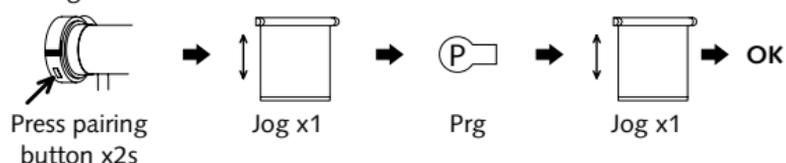


Remove controller B via pre-existing controller A

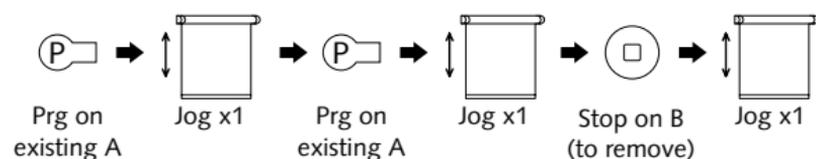

➔ Controller B removed


Remove all controllers

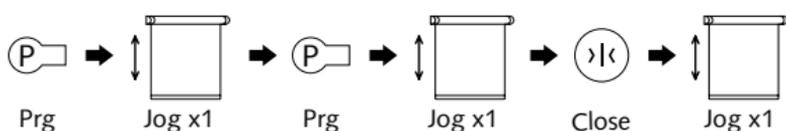

➔ All controllers removed

Note: All other settings, except paired remote controllers, remain the same.

CANCELLING LIMITS

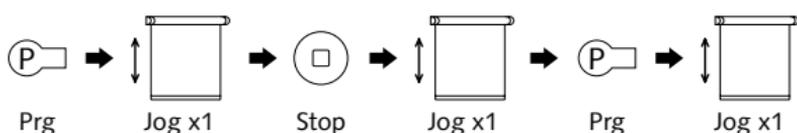

➔ Limits cancelled

Note: Do not run the motor when end limits are not set.. Limits should be set immediately to protect the blind and motor.

6. Notice



RECYCLING

Do not dispose of the product with household waste. Ensure that you return it to a collection point or depot for recycling purposes.

EN

7. Support

FAQ

Why isn't the motor working?

- Check if you have paired a remote control. If your remote is not paired yet you need to pair the remote control with the motor by following the pairing instructions in your manual.
- Check if the RF control is active. If the RF control is inactive, you can reactivate it by pressing the motor button for 2 seconds to activate the RF control.

Why does the motor stop suddenly during operation?

- Check if the upper and lower limits are set correctly. If not, re-set the upper and lower limits according to the instructions in your manual.
- Check if the blind doesn't exceed the rated load. If so, reduce the load on the motor by adjusting the blind or checking that it meets the weight specifications.

Why does the motor only move in one direction?

- Check if the motor's limits are set correctly. If they are incorrect, then cancel the original limits and set new upper and lower limits following the instructions in your manual.

SCAN FOR MANUAL



FOREST TM_MANUAL_EN_270325

www.forestgroup.com/en/installation-guides